

Billi™

User guide
Billi Eco Sparkling
Tap option XL
(906000)



User guide

Billi Eco Sparkling – XL.

Contents

Warnings & Important information	2
General Maintenance	3
Features and Modes	4
Tap Options & Operation	
XL Tap	5
Dispenser Icon Codes	
XL Tap	6
Filtration Information	7
Changing the filter	8
Changing the CO ₂ cylinder	9
Service Support	11

Warnings & Important information

- For continued safety of this appliance it must be installed, operated and maintained in accordance with the manufacturer's instructions.
- Your appliance should be installed by a suitably qualified tradesperson.
- For correct operation of this appliance it is essential to observe the instructions as outlined in this booklet.
- Do not use this appliance with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.
- Filter replacement must be performed at intervals of not more than 12 months.
- Use this appliance only as directed in these instructions and only for its designed purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not suitable in an area where a water jet could be used.
- Children should be supervised to ensure that they do not play with the appliance.
- **DANGER:** The operation of the thermal cut-out indicates a possibly dangerous situation. Do not reset the thermal cut-out until the water heater has been serviced by a suitably qualified person.
- **WARNING:** Do not connect any restrictor or pressure relief device to the vent pipe of this water heater if installed.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid creation of a hazard.
- **WARNING:** Avoid spillage on the connector.
- **WARNING:** Potential injury from misuse.
- **WARNING:** Heating element surface is subject to residual heat after use.

User guide

Billi Eco Sparkling – XL.

- Billi hose sets as supplied with the appliance are to be used. Old or other manufacturer's hose sets should not be re-used.
- If the appliance is located where the ambient air temperature could fall below 4°C when the heater is not in use, do not turn off the power supply to the appliance. This safeguard does not offer the same protection to the connecting pipework and fittings.
- The ambient temperatures this unit should operate within are 4°C to 45°C.
- Turn off power to unit, by unplugging the power cord from the power point, if water supply is turned off
- The appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses and clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments
 - Catering and similar non-retail applications
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket - outlets or portable power supplies at the rear of the appliance.

Please note maximum water inlet pressure is 1MPa

Cupboard ventilation requirements

Your Eco Sparkling underbench module requires cupboard ventilation, refer to install guide for details. Care should be taken when using the cupboard space, to avoid stretching or damaging plastic pipe work. Check fittings and tubing at each filter change for signs of damage or leakage. Always ensure access to power switch and water supply tap is not restricted.

Caution and safety

Boiling water is dangerous and can cause severe burns, particularly with young children. Boiling water must always be handled with caution. Use this appliance only as directed in these instructions and only for the purpose for which it has been designed. Your Billi Eco is designed to be safe and practical. In an environment with young children, it is recommended that the boiling water safety switch is activated.

The following safety features have been included:

- Ergonomic levers
- Levers/touch activations located safely above water outlet.
- Smooth electronically controlled boiling water flow rate. Flow is briefly reduced as water first enters cup to prevent splashing.
- Dispenser remains cool to touch.
- Childproof safety switch.
- Boiling water Safety Isolation mode.

General Maintenance

Your Eco Sparkling has been designed to require minimal maintenance other than replacement of filter cartridges. During each filter change, check all water connection fittings for signs of leakage. Check all tubing for any signs of damage. Check the cupboard area around the base of unit for any signs of moisture. Ensure side vents of the under bench module are kept clear and airflow is not obstructed. Restricted airflow will cause inefficient operation of the refrigeration system.

—Cleaning the dispenser

Your Eco Sparkling Dispenser is fabricated from solid zinc casting material with tough protective chrome plating. Proper care of the Billi Electronic dispenser crucial; Avoid using abrasive cleaners. Wipe clean using a damp cloth. Use of a non-solvent, non-smearing cleaner such as Windex is recommended. Do not pour water over dispenser.

User guide

Billi Eco Sparkling – XL.

Features and Modes

Dispenser Swivel

The Eco dispenser incorporates a swivel function, allowing the dispenser to be swung out of the way if more sink space is required. A central position stop provides positive location during normal usage.

Safety Timeout

Your Eco Sparkling incorporates a water delivery Safety Timeout to prevent an uncontrolled flow of water. Water flow stops automatically after a set time interval. Flow can be started again by releasing and pressing the dispenser lever or buttons. Boiling water timeout – 10 secs; Chilled water – 1 minute.

Childproof safety switch

Your Eco Sparkling is fitted with a childproof safety lock-out feature to protect against accidental dispensing of boiling water and the risk of burns. Please refer to safety switch settings on page 5.

Self learning timer (Ecolntelligence)

Your Billi Eco incorporates an energy saving self learning timer. This timer learns the users behaviour over a period of time (up to one month) and pre-empts the need for water throughout each 24-hour period over a week. Data is lost when the power is removed however learnings from the first days use is applied to the entire learning cycle so the unit will quickly resume intelligent timer operation. When the self-learning timer is enabled the unit will enter standby if no water is expected to be used for a 3 hour or more period. The unit will shutdown completely if no water is expected to be used for a 6 hour or more period. In office environments this feature will typically cause the unit to turn off outside normal business hours, ie: overnight and on weekends. In domestic environments with no one home during

working hours the unit will turn off through each weekday but may remain on at night and during weekends. See page 6 for dispenser icons. To activate, refer to Options, page 5.

Standby Mode

Standby operation may be optionally enabled to reduce power consumption. In standby mode the hot water set point is reduced to 72°C. When enabled, standby is invoked after two hours from the time of last use. When a tap lever or button is pressed in standby no water is dispensed. The indicators will flash to indicate the water is not ready. The lever or button can be repressed to dispense water. During Standby mode the moon & star icon will flash. See page 6 for dispenser icons. To activate, refer to Options, page 5.

Boiling water disabled mode

Your Eco Sparkling features an additional boiling water safety isolation feature. Once activated, delivery of boiling water becomes totally disabled. Chilled water can be dispensed normally. During this mode, the red, hot, icon will remain off. To activate, refer to Options & Operation, Safety Switch Settings, page 5.

Holiday mode

Holiday Mode is provided to save energy when the unit will not be used for long periods. In this mode both the water chiller and water heater are disabled and the unit will use very little power. Pressing the Pressure Relief button places the unit in Holiday Mode. The unit will exit Holiday Mode if either the power is turned off then on or if any of the levers are pressed. The Self Learning Timer will ignore user behaviour while the unit is in Holiday Mode and resume normal operation when the mode is terminated. Holiday Mode is indicated by the star & moon icon being illuminated. See page 6 for icon images.

User guide

Billi Eco Sparkling – XL.

Options and Operation

To operate, simply press the left lever to dispense boiling water and the right lever to dispense chilled. Pressing both levers will dispense sparkling water. When lifted the levers will latch for continual delivery, until released with a light press.

Operating modes can be selected by the user by entering Options Mode.

Within the options mode, you can set the safety switch through the hot water lever and power save mode through the cold water lever.

To enter the options mode:

1. If the following sequence malfunctions, remove the sparkling unit control box and try again.
2. Turn on the unit and wait for normal operation (red & blue icons are both illuminated constantly).
3. Press both the hot and cold levers on the dispenser. While holding the two levers down, touch the safety switch indent at the back of the dispenser. Hold both levers and the safety switch until dispenser lights change colour.
4. Release both the levers & safety switch.
5. Within 10 seconds, push and release the pressure relief button on the unit.
Note: Older models may require this step to be skipped.
6. Unit is now in options mode.
7. If you wish to change or set the safety switch mode, follow the safety switch settings procedure. If you wish to change or activate the power saving mode follow the power save mode settings procedure.

Safety Switch settings

The **Red** padlock indicates the different safety settings enabled. To change or activate a setting once in options mode, press and release the hot (left) lever to scroll through the following options;

- **Red Icon Off:** indicates the hot tap is disabled.
- **Padlock icon on, Red icon on:** indicates safety switch is enabled
- **Red Icon On:** indicates normal operation with safety switch not enabled.

To save new setting and exit Options Mode, touch the safety switch and release. Wait 10 seconds for unit to return to normal operation, with the desired settings.

To dispense boiling water once the safety switch is activated simply touch the indent on the black panel, at the back of the tap. You will be able to dispense boiling water for 8 seconds. After 8 seconds the safety switch will automatically reactivate, and the red padlock icon will appear again.

Power save mode settings (EcoIntelligence, standby or on 24/7)

The **Green** icons on the tap indicate the power save level that is selected. To change or activate a setting once in options mode press and release the cold(right) lever to scroll through the following options;

- **Green Leaf icon:** indicates Eco Intelligence™ self learning timer is enabled.
- **Moon & Star Icon on:** indicates Standby Mode is enabled.
- **Blue Icon On, no green icons:** indicates system is in 24 hour continuous mode

To save new setting and exit Options Mode, press the safety switch and release. Wait 10 seconds for unit to return to normal operation, with the desired settings.

Holiday mode

To set press the pressure relief valve located under the unit cover beside the filter housing.

User guide

Billi Eco Sparkling – XL.



Dispenser Icon

Orange dot.

Flashes when filter change due. On constant when overdue.

Red lock illuminated.

Safety button activated. To use, press the indent on the back of the tap momentarily & lift or press the boiling lever.

Green leaf illuminated.

Eco intelligence.

Green moon & stars illuminated.

In holiday mode. Red & blue icons will not be displayed in this mode.

Green moon & stars flashing

In standby mode. Red & blue icons will not be displayed in this mode.





















Red dot.

Flashes when heating up to temperature. On constant when boiling water ready. Off when in holiday or standby mode.

Blue dot.

Flashes when chilling. On constant when chilled water ready. Off when in holiday or standby mode. Red & blue dots will flash yellow if the unit goes into fault.

Dispenser Icon codes

	Red		Normal operation
	Blue		Normal operation
	Red		Operating temperatures of hot and cold water not yet reached
	Blue		
	Red		Boiling water disabled
	Blue		
	Red		System in holiday or standby mode or off
	Blue		
	Orange		Unit in fault mode
	Orange		

User guide

Billi Eco Sparkling – XL.

Billi Filter Cartridges

The Eco Sparkling is fitted with single dual action filter incorporating sediment and chemical removal elements. All Billi Eco filters are manufactured using bacteria and biofilm resistant materials for improved water quality.

Premium filters provide better tasting water due to the high quality, carbon chemical removal filter. Sub micron rated, these filters have excellent chemical absorption, removing or reducing chlorine, volatile organic compounds (VOCs), chemicals, tastes and odours. Use only genuine filters as designed for this system. All drinking water filtration systems should be flushed after a period of non-use. If your Eco Sparkling has not been used for a period of 48 hours or more, flush the system for 1 minute.

Replacement of Billi Filter Cartridge

Periodic replacement of your Filter Cartridge is necessary to maintain the cleanliness of your drinking water. Billi recommends a filter replacement every 6 months. A replacement filter change service is available. If you wish to install the replacement filter cartridges yourself, your Billi representative will provide genuine Billi replacement filter cartridge sets.

Filter Change Due Monitor

The Eco Sparkling filter change due monitor operates by counting the number of cups dispensed and the number of days elapsed until a pre-set level is reached. Once reached, the yellow filter icon as pictured above will turn on. The Eco Sparkling will continue to operate while the filter indicator is flashing. Water filters installed in areas with higher levels of sediment will experience a reduced service life. It may be necessary to change filters before the change filter indicator flashes. If particularly dirty water is noticed coming through the water supply, e.g. from other tap ware, immediately place your Eco Sparkling into Holiday Mode by pressing the Pressure Relief button. This will help prevent premature blocking of the filter cartridges.




User guide

Billi Eco Sparkling – XL.

Filter removal and replacement instructions

Important note: Please ensure you remove the foam packing under the filter before installing.

1. Remove the front panel.
2. Place the unit in Holiday Mode by pressing the Pressure Relief button once. The lights on the dispenser will alternate and then go off
3. Hold filter and swing towards you slowly. The top of the filter is in a hinged cradle assembly. It should stop after approximately 30 degrees of travel.
4. The filter can now be released from the holding cradle by pulling down on the filter.
5. Take care not to spill water in the base of the tray. If so wipe gently with absorbent paper.
6. Install new filter into the same location by pushing all the way up into the cradle.
7. Push filter back into the unit until it locks into place. Power light should come back on.
8. Flush chilled side until water flow stops. Wait 10 minutes. Repeat these steps 2 times.
9. Check for any leaks from around the filter, hosing or pipeworks.
10. Replace the front cover.

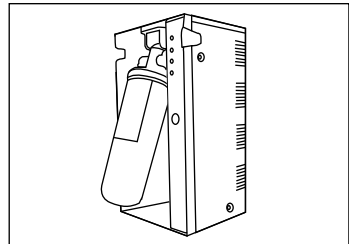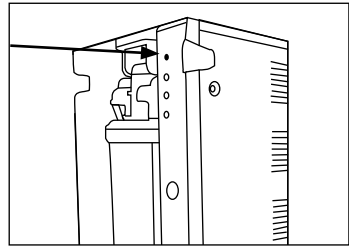
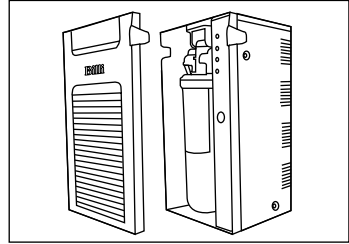


User guide

Billi Eco Sparkling – XL.

Removing the CO₂ cylinder

1. Turn off the CO₂ regulator by turning the black knob anti-clockwise.
Refer diagram A.
2. Drain any remaining pressure by activating the sparkling water on the dispenser installed.
3. Turn off the power. This will prevent the internal pump from pressurizing the system. Ensure the pressure gauge shows near to zero pressure.
 - If the pressure is less than one bar, and the dial is fully anti-clockwise, then the cylinder can be removed with only a small amount of CO₂ escaping.
4. Hold the regulator and rotate the cylinder clockwise to remove. If the bottle is not empty, CO₂ may escape while you are turning the bottle. The bottle will self-seal prior to the thread being free from the regulator.
Refer diagram B.
 - Avoid breathing air containing CO₂ or contact with the cold escaping gas as per the Safety Data Sheet.

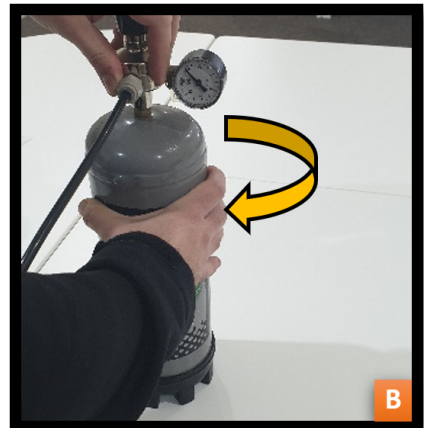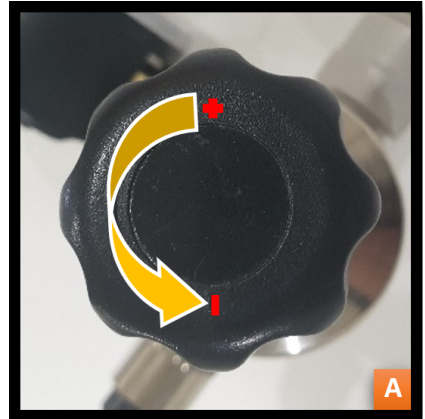


User guide

Billi Eco Sparkling – XL.

Installing the CO₂ cylinder

1. Ensure all connections between the regulator and unit are secure.
Position the regulator on top of the CO₂ cylinder.
 2. Tighten the bottle by rotating anti-clockwise.
 - CO₂ will escape while you are turning the bottle. Continue to turn the bottle to form a seal with the regulator.
 - Refer diagram A.
 3. Open the pressure regulator by turning the black knob clockwise.
Refer diagram B.
 - Set the initial pressure to around 4 Bar.
 - Refer diagram C.
 - Turn on the unit power and wait for the unit to come back to temperature.
 4. Check bottle and connections for leaks using soapy water to test for bubbles.
- NOTE:** the ¼" tube and pushfit fittings may settle when the pressure is turned on.
5. Increase the pressure to set your level of carbonation.
Initial set point may vary once the unit is running, you may need to reset the pressure once the system has stabilised.

WARNING: Do not set the pressure above 5 bar.

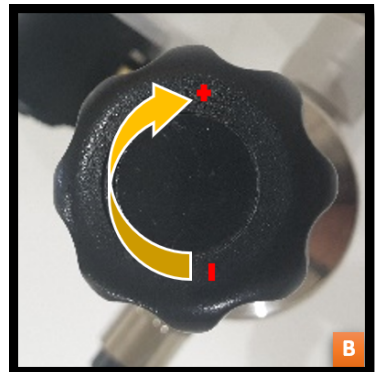

User guide

Billi Eco Sparkling – XL.

Thank you for choosing to install a Billi Eco Drinking Water Appliance. Your Eco is manufactured to exacting standards using high quality materials and with proper maintenance and care, should function for many years.

For information on our filtration and service contract please contact Billi Head Office on 1800 812 321 or email us at service@billi.com.au.

For technical support please call 1800 812 321 and speak to one of Billi's experienced technician's.

To book a service call out request a filter change or please contact the Billi Service Centre on 1800 812 321 or book online at www.billi.com.au

Filter cartridges are also available for purchase online at www.billi.com.au

Billi™

Billi Australia Pty Ltd
42 Lucknow Crescent, Thomastown
Victoria 3074 Australia

Telephone 1800 812 321

www.billi.com.au

Designed and manufactured in Australia.

As Billi Australia Pty Ltd has a policy of continual improvement, all details are subject to change without notice. All goods are sold subject to our published terms and conditions. Billi is a registered trademark. 1220

610002 Rev 02